

# SmartGen

MAKING CONTROL SMARTER

## APC715 PUMP UNIT CONTROLLER USER MANUAL



郑州众智科技股份有限公司  
SMARTGEN(ZHENGZHOU)TECHNOLOGY CO.,LTD.

**SmartGen众智** Chinese trademark

**SmartGen** English trademark

SmartGen – make your generator *smart*

SmartGen Technology Co., Ltd.

No.28 Jinsuo Road

Zhengzhou

Henan Province

P. R. China

Tel: +86-371-67988888/67981888/67992951

+86-371-67981000(overseas)

Fax: +86-371-67992952

Web: [www.smartgen.com.cn/](http://www.smartgen.com.cn/)

[www.smartgen.cn/](http://www.smartgen.cn/)

Email: [sales@smartgen.cn](mailto:sales@smartgen.cn)

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

Applications for the copyright holder's written permission to reproduce any part of this publication should be addressed to SmartGen Technology at the address above.

Any reference to trademarked product names used within this publication is owned by their respective companies.

SmartGen Technology reserves the right to change the contents of this document without prior notice.

**Table 1 Software Version**

Date	Version	Note
2013-08-28	1.0	Original release.
2014-03-06	1.1	1. Add maintenance setting description. 2. Add indication alarm description. 3. Modify some speed adjustment functions. 4. Add miscellaneous screen description.
2019-05-21	1.2	Fix GOV terminal description and typical application diagram.
2021-03-08	1.3	Modify the error in table 3 and other translation problems.
2022-08-16	1.4	Update company logo and manual format.

This manual is suitable for APC715 pump unit controller only.

**Table 2 Notation Clarification**

Symbol	Instruction
 <b>NOTE</b>	Highlights an essential element of a procedure to ensure correctness.
 <b>CAUTION!</b>	Indicates a procedure or practice, which, if not strictly observed, could result in damage or destruction of equipment.
 <b>WARNING!</b>	Indicates a procedure or practice, which could result in injury to personnel or loss of life if not followed correctly.

SmartGen

## CONTENTS

1	OVERVIEW .....	6
2	PERFORMANCE AND CHARACTERISTICS .....	7
3	SPECIFICATION .....	9
4	OPERATION .....	10
4.1	INDICATOR LIGHT .....	10
4.2	KEY FUNCTIONS .....	11
4.3	LCD DISPLAY .....	12
4.3.1	MAIN DISPLAY .....	12
4.3.2	USER MENU AND PARAMETERS SETTING MENU .....	14
4.4	AUTO START/STOP OPERATION .....	17
4.5	MANUAL START/STOP OPERATION .....	18
4.6	ON-LOAD CONTROL PROCEDURE .....	18
4.7	ADJUST SPEED CONTROL PROCEDURE .....	19
5	PROTECTION .....	20
5.1	WARNINGS .....	20
5.2	SHUTDOWN ALARM .....	22
5.3	COOLING SHUTDOWN ALARM .....	24
5.4	FAULT IDLE ALARM .....	24
5.5	INDICATION ALARM .....	24
6	WIRING CONNECTION .....	25
7	DEFINITION AND RANGE OF PARAMETERS .....	28
7.1	PARAMETER CONTENTS AND RANGES .....	28
7.2	DEFINED CONTENTS OF PROGRAMMABLE OUTPUT PORTS .....	35
7.2.1	DEFINED CONTENTS OF PROGRAMMABLE OUTPUT PORTS .....	35
7.2.2	CUSTOM PERIOD OUTPUT .....	39
7.2.3	CUSTOM COMBINED OUTPUT .....	39
7.3	DEFINED CONTENTS OF CONFIGURABLE INPUT PORTS (ALL GND(B-) ACTIVE) .....	40
7.4	SELECTION OF SENSORS .....	42
7.5	CONDITIONS OF CRANK DISCONNECT SELECTION .....	43
7.6	MAINTENANCE SETTING .....	44
8	PARAMETERS SETTING .....	45
9	SENSOR SETTING .....	46
10	TYPICAL APPLICATION .....	47
11	INSTALLATION .....	48
12	CONNECTIONS OF CONTROLLER WITH J1939 ENGINE .....	49
12.1	CUMMINS ISB/ISBE .....	49
12.2	CUMMINS QSL9 .....	49
12.3	CUMMINS QSM11 (IMPORT) .....	50
12.4	CUMMINS QSX15-CM570 .....	50
12.5	CUMMINS GCS-MOVBUS .....	51

---

12.6 CUMMINS QSM11.....	51
12.7 CUMMINS QSZ13.....	52
12.8 DETROIT DIESEL DDEC III / IV.....	52
12.9 DEUTZ EMR2.....	53
12.10 JOHN DEERE .....	53
12.11 MTU MDEC .....	53
12.12 MTU ADEC (SMART MODULE).....	54
12.13 MTU ADEC (SAM MODULE).....	54
12.14 PERKINS.....	55
12.15 SCANIA .....	55
12.16 VOLVO EDC3.....	55
12.17 VOLVO EDC4.....	56
12.18 VOLVO-EMS2.....	57
12.19 YUCHAI .....	57
12.20 WEICHAJ.....	58
13 USB.....	58
14 FAULT FINDING.....	59

SmartGen

## 1 OVERVIEW

**APC715 Pump Unit Controller** is designed for pump systems which controlled by engine. It allows automatic start/stop, data measurement, alarm protection as well as remote control, remote measurement and remote communication function. Utilizing the GOV (Engine Speed Governor) control function, the controller is able to stabilize the outlet/inlet pressure. CANBUS (SAE J1939) interface enables the controller to communicate with various ECU or non-ECU engine pumps.

**APC715 Pump Unit Controller** fits with LCD display, optional languages interface (including English, Chinese or other languages); simultaneously the exact parameters of pump unit and engine are indicated by the LCD display on the front panel and the controller is reliable and easy to use.

**APC715 Pump Unit Controller** adopts powerful 32-bit ARM micro-processor technology with precision parameters measuring, fixed value adjustment, time setting and threshold setting and etc. The majority of parameters can be configured from front panel and all the parameters can be set using PC (via USB port) and can be adjusted and monitored with the help of RS485 port. It can be widely used in a number of pump control system with compact structure, simple connections and high reliability

SmartGen

## 2 PERFORMANCE AND CHARACTERISTICS

- 480x272 pixel, 4.3-inche color TFT-LCD with backlight, multilingual interface (including Chinese, English or other languages) which can be chosen at the site, making commissioning convenience for factory personnel;
- Improved LCD wear-resistance and scratch resistance due to hard screen acrylic;
- Silicon panel and pushbuttons for better operation in high/low temperature environment;
- RS485 communication port enabling remote control, remote measuring, remote communication via ModBus protocol;
- Equipped with CANBUS port and can communicate with J1939 engine. Not only can you monitor frequently-used data (such as water temperature, oil pressure, engine speed, fuel consumption and so on) of ECU machine, but also control start, stop, raising speed and speed droop via CANBUS port;
- GOV Function; outlet pressure and inlet pressure can be adjusted via GOV function. GOV port: Relay output; Analog output (for speed control unit); CANBUS port (for engine control unit);
- The controller detects not only engine speed but also gearbox speed;
- Water pressure curve and flow curve are user-defined;
- 10 analog sensors; sensors can switch between resistor type and current type using jumper;
- More kinds of curves of temperature, oil pressure, fuel level can be used directly and users can define the sensor curves by themselves;
- Precision measure and display parameters about engine and pump unit; e.g. engine high water temperature, low oil pressure, over speed, high water pressure, low water pressure, over flow and other kinds of fault indication and protection function;
- There are two kinds of speed adjustment ways: manually and automatically; users can adjust the speed on the panel;
- Idle control function; the unit will slow down to idle running automatically when the clutch releases;
- All output ports are relay-out;
- PLC programming function; can be applied to complex system;
- Parameter setting: parameters can be modified and stored in internal FLASH memory and cannot be lost even in case of power outage; most of them can be adjusted using front panel of the controller and all of them can be modified using PC via USB or RS485 port;
- Multiple crank disconnect conditions (speed sensor, oil pressure) are optional;
- Widely power supply range DC(8~35)V, suitable for different starting battery voltage environment;
- Event log, real-time clock, scheduled start & stop pump unit (can be set as start pump unit once a day/week/month whether with load or not);
- Accumulative total run time A and B. Users can reset it as 0 and re-accumulate the value which make convenience to users to count the total value as their wish;
- Can control engine heater, cooler and fuel pump;
- With maintenance function. Actions can be set when maintenance time out;
- All parameters used digital adjustment, instead of conventional analog modulation with normal potentiometer, improving reliability and stability;
- Waterproof security level IP55 due to rubber seal installed between the controller enclosure and panel fascia;
- Metal fixing clips enable perfect performance in high temperature environment;

- Modular design, anti-flaming ABS plastic enclosure, pluggable connection terminals and embedded installation way; compact structure with easy mounting.

SmartGen

**3 SPECIFICATION**

**Table 3 Technical Parameters**

Item	Contents
Working Voltage	DC8. 0V to 35. 0V, Continuous Power Supply
Overall Consumption	<4W (Standby mode: ≤2W)
Speed Sensor Voltage	1.0V to 24V (RMS)
Speed Sensor Frequency	10,000Hz (max)
Start Relay Output	16Amp DC28V power supply
Fuel Relay Output	16Amp DC28V power supply
Programmable Relay Output 1-6	7Amp DC28V power supply
Programmable Relay Output 7-10	7Amp AC250V volts free
Analog Sensor	4 fixed sensors, 6 configurable sensors
Overall Dimensions	266mm x 182mm x 45mm
Panel Cutout	214mm x 160mm
Working Temperature	(-25~+70)°C
Working Humidity	(20~93)%RH
Storage Temperature	(-25~+70)°C
Protection Level	IP55 Gasket
Weight	0.95kg

**4 OPERATION**

**4.1 INDICATOR LIGHT**



**Fig.1 Front Panel Indication**

**NOTE:** Selected indicators description:


**Table 4 Warning and Alarm Indicators**

Alarm Type	Warning Indicator	Alarm Indicator
Warning Alarm	Slow flashing	Slow flashing
Shutdown Alarm	Off	Fast flashing

Running indicator: illuminated from crank success to ETS while off during other periods.

**4.2 KEY FUNCTIONS**

**Table 5 Key Descriptions**

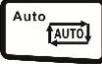Icon	Keys	Description
	Stop	Stop running pump unit in Auto/Manual mode; Reset alarm in stop mode; Lamp test (press at least 3 seconds); During stopping process, press this button again to stop pump unit immediately.
	Start	Start pump unit in Manual/Test mode.
	Manual Mode	Press this key and controller enters in <b>Manual</b> mode.
	Auto Mode	Press this key and controller enters in <b>Auto</b> mode.
	Mute	Alarming sound off; If there is alarm, pressing the button at least 3 seconds can reset this alarm.
	Load	Can control the clutch to switch on or off in manual mode.
	Adjust Speed	Enter/Exit the speed adjust menu.
	Up/Increase	1) Screen scroll; 2) Up cursor and increase value in setting menu.
	Down/Decrease	1) Screen scroll; 2) Down cursor and decrease value in setting menu.
	Left	1) Screen scroll; 2) Left move cursor in setting menu.
	Right	1) Screen scroll; 2) Right move cursor in setting menu.
	Set/Confirm	1. Enter into "help" interface; 2. Pressing and holding for more than 3 seconds can enter parameter configuration menu; 3. In settings menu confirms the set value.
	Exit	1. Returns to the main menu; 2. In settings menu returns to the previous menu.

**NOTE:** In manual mode, pressing  and  simultaneously will force generator to crank. Successful start will not be judged according to crank disconnect conditions, operator will have to crank the starter motor manually; when operator decides that the engine has fired, he/she should release the button and start relay will be deactivated, safety on delay will start.

**WARNING:** Default password is 00318, user can change it in case of others change the advanced parameters setting.

Please clearly remember the password after changing. If you forget it, please contact SmartGen services and send all PD information in the controller page of "ABOUT" to us.

## 4.3 LCD DISPLAY

### 4.3.1 MAIN DISPLAY

Main screen is divided into left and right separate viewing areas, use  to select a viewing area; the selected area is marked with  in its upper right corner. Both viewing areas show pages; use   to scroll the pages and   to scroll the screen.

★**Engine**, including as below,

Engine status, engine temperature, engine oil pressure, fuel level, configurable sensor 1, battery voltage, charger voltage, accumulated run time, accumulated start times.

▲**NOTE:** If connected with J1939 engine via CANBUS port, this page also includes: coolant pressure, coolant level, fuel temperature, fuel pressure, inlet temperature, exhaust temperature, turbo pressure, fuel consumption, total fuel consumption and so on. (Different engine with different parameters).

★**Pump Unit**, including as below,

Outlet pressure, pump flow, pump head, config. sensor 2~6 (can be set as temperature sensor, pressure sensor or level sensor).

Formula: Pump Head = (Outlet pressure - Static Pressure)/0.0098.

Pump flow is calculated according to relation curve of outlet pressure and flow; the relation curve should be set by users according to the actual usage.

★**Alarm:**

Display all warnings, shutdown alarms, cooling shutdown alarms and the corresponding information.

▲**NOTE:** For ECU warnings and shutdown alarms, if the alarm information is displayed, check engine according to it, otherwise, please check the manual of engine according to SPN alarm code.

★**Event log**

Records all start/stop events (shutdown, cooling shutdown, manual/auto start or stop) and the real time when event occurs.

★**Others**, including,

Time and date, maintenance due time, input/output ports status.

★**About**, including,

Issue time of software and hardware version, product PD number.

★**Miscellaneous**, including:

Working mode, engine status, engine temperature, engine oil pressure, fuel level, outlet pressure, config. sensor 2 (inlet pressure), accumulated run time, real-time clock.

Press  in main screen can jump to **miscellaneous screen**.

★**Status**, including as below,

Engine speed, battery 1 voltage, engine status.

**Table 6 Status Indicator**

Indicator	Status
Green	Normal status; No alarm.
Yellow	Warning or fault idle alarm occurs.
Red	Shutdown alarm occurs.

Example:

Engine	Pump 
On load	Outlet Pressure
Manual Mode	1.0MPa 10bar 145psi
Normal Running	Config Sensor 2
Engine Temp.	45°C 113°F
85°C 185°F	Config Sensor 3
Oil Pressure	465kPa 4.65bar 67.4psi
465kPa 4.65bar	Config Sensor 4
67.4psi	100%
 1500rpm	 27.6V
Normal Running	

Engine 	Pump
Fuel Level	Config Sensor 5
100%	55°C 131°F
Config Sensor 1	Config Sensor 6
85°C 185°F	60°C 140°F
Battery Voltage 1	Pump Flow
27.6V	200m³/h
Battery Voltage 2	Pump Head
27.6V	102m
 1500rpm	 27.6V
Emergency Stop Alarm	

### 4.3.2 USER MENU AND PARAMETERS SETTING MENU

Press and hold  for more than 3 seconds to enter into user menu;

★Parameter

After entering the correct password (factory default password is 00318), you can enter into parameter settings interface.

★Language

Selectable Chinese, English and others (default: Espanol).

★Commissioning

On load, off load or custom commissioning can be chosen. Custom commissioning can configure on load or not during commissioning, when to commissioning and select the mode after commissioning (manual mode, auto mode and stop mode).

★Clear users' accumulation

Can clear User Accumulated Run A, User Accumulated Run B, Engine Accumulated Run time and Accumulated Start times.

Parameter setting including as following,

★Timer settings

★Engine settings

★Analog sensor settings (Engine temperature, engine oil pressure, fuel level, config. 1~6, outlet pressure)

★Input port settings

★output port settings

★GOV settings

★Pump settings

★Module settings

★Scheduling and maintenance settings

Example,

Return	>Start Delay	Table 1: Use   to scroll settings,  to enter settings (table 2),  to exit settings menu.
<b>Timers</b> >	>Stop Delay	
Engine	>Preheat Delay	
Temp. Sensor	>Cranking Time	
OP Sensor	>Crank Rest Time	
Level Sensor	>Safety On Time	
Config Sensor 1	>Start Idle Time	
Config Sensor 2	>Warming Up Time	
Config Sensor 3	>Cooling Time	
Config Sensor 4	>Stop Idle Time	
Config Sensor 5	>ETS Hold Time	

Return	>Start Delay	Table 2: Use   to scroll settings (table 3),  to enter settings (table 4),  to return to previous menu (table 1).
<b>Timers</b> >	>Stop Delay	
Engine	>Preheat Delay	
Temp. Sensor	>Cranking Time	
OP Sensor	>Crank Rest Time	
Level Sensor	>Safety On Time	
Config Sensor 1	>Start Idle Time	
Config Sensor 2	>Warming Up Time	
Config Sensor 3	>Cooling Time	
Config Sensor 4	>Stop Idle Time	
Config Sensor 5	>ETS Hold Time	

Return	>Start Delay	Table 3: Use   to scroll settings,  to enter settings (table 4),  to return to previous menu (table 1).
<b>Timers</b> >	>Stop Delay	
	>Preheat Delay	
Engine	>Cranking Time	
Temp. Sensor	>Crank Rest Time	
OP Sensor	>Safety On Time	
Level Sensor	>Start Idle Time	
Config Sensor 1	>Warming Up Time	
Config Sensor 2	>Cooling Time	
Config Sensor 3	>Stop Idle Time	
Config Sensor 4	>ETS Hold Time	
Config Sensor 5		

>Start Delay		Table 4: Press  to enter settings (table 5),  to return to previous menu (table 6).
>Stop Delay	<b>00008</b>	
>Preheat Delay		
<b>&gt;Cranking Time</b>		
>Crank Rest Time		
>Safety On Time		
>Start Idle Time		
>Warming Up Time		
>Cooling Time		
>Stop Idle Time		
>ETS Hold Time		

<ul style="list-style-type: none"> <li>&gt;Start Delay</li> <li>&gt;Stop Delay</li> <li>&gt;Preheat Delay</li> </ul>	<div style="border: 1px solid black; padding: 5px; display: inline-block;">00008</div>	<p>Table 5: Press   to change cursor position,   are used for changing cursor value,  Confirm setting (table 4),  exit setting (table 4).</p>
<ul style="list-style-type: none"> <li><b>&gt;Cranking Time</b></li> <li>&gt;Crank Rest Time</li> <li>&gt;Safety On Time</li> <li>&gt;Start Idle Time</li> <li>&gt;Warming Up Time</li> <li>&gt;Cooling Time</li> <li>&gt;Stop Idle Time</li> <li>&gt;ETS Hold Time</li> </ul>		

<ul style="list-style-type: none"> <li>&gt;Start Delay</li> <li>&gt;Stop Delay</li> <li>&gt;Preheat Delay</li> </ul>	<div style="border: 1px solid black; padding: 5px; display: inline-block;">00008</div>	<p>Table 6:   are used for changing the setting contents.  Confirm setting (table 4),  to return to previous menu (table 1).</p>
<ul style="list-style-type: none"> <li><b>&gt;Cranking Time</b></li> <li>&gt;Crank Rest Time</li> <li>&gt;Safety On Time</li> <li>&gt;Start Idle Time</li> <li>&gt;Warming Up Time</li> <li>&gt;Cooling Time</li> <li>&gt;Stop Idle Time</li> <li>&gt;ETS Hold Time</li> <li>&gt;Wait Stop Time</li> </ul>		

**NOTE:** Pressing  can exit setting directly during setting.

## 4.4 AUTO START/STOP OPERATION

Auto mode is selected by pressing the  button; a LED besides the button will illuminate to confirm the operation.

### Auto Start Sequence:

1. When "Remote Start (On Load)" is active, "Start Delay" timer is initiated;
2. When start delay is over, preheat relay energizes (if configured), "Preheat Delay XX s" information will be displayed on LCD.
3. After the above delay, the Fuel Relay is energized, and then one second later, the Start Relay is engaged. If the pump unit fails to fire during the "Cranking Time", then the fuel relay and start relay are disengaged for the pre-set rest period; "Crank Rest Time" begins and wait for the next crank attempt.
4. Should this start sequence continue beyond the set number of attempts, the start sequence will be terminated, the Fail to Start fault will be displayed on LCD.
5. In case of successful crank attempt, the "Safety On" timer is activated, during this period, Low Oil Pressure, High Temperature, Under speed and Charge Alternator Failure alarms are inactive. As soon as this delay is over, "Start Idle" delay is initiated (if configured).
6. During "Start Idle" delay, under speed alarm is inhibited. When this delay is over, "Warming up" delay is initiated (if configured).
7. After the "Warming up" delay, if engine speed has reached on-load requirements, then the pump close relay will be energized; pump unit will take load; pump unit will enter into Normal Running status.

**▲NOTE:** In case of "Remote Start (off Load)", the procedure is the same, except for step No. 7: the pump close relay will NOT be energized, generator will NOT accept load.

### Auto Stop Sequence,

- 1) When the "Remote Start" signal is deactivated while the "Remote Stop" signal is active, the "Stop Delay" is initiated.
- 2) Once this stop delay has expired, the Pump Unit Breaker will open and the "Cooling Delay" is then initiated. Should the Remote Start signal be re-activated during the cooling down period, the unit will return running status. Once the "Cooling Delay" expires, the "Stop Idle" delay is initiated.
- 3) During "Stop Idle" Delay (if configured), idle relay is energized.
- 4) "ETS Solenoid Hold" begins, ETS relay is energized while fuel relay is de-energized and complete stop is detected automatically.
- 5) "Fail to Stop Delay" begins, complete stop is detected automatically.
- 6) Pump unit is placed into "After Stop Time" after its complete stop. Otherwise, fail to stop alarm is initiated and the corresponding alarm information is displayed on LCD (If pump unit stopped successfully after "Failed to Stop" alarm, it will enter "After stop time" and remove alarm).
- 7) Pump unit is placed into its standby mode after its "After Stop Time".

## 4.5 MANUAL START/STOP OPERATION

- Manual Start: Manual mode is selected by pressing the  button; a LED beside the button will illuminate to confirm the operation; then press  button to start the unit; can automatically detect crank successful, and unit accelerates to high-speed running automatically. When **"Idle Run without Load"** is enabled, the unit is idle running when crank succeed; unit accelerates to high-speed running automatically and takes load after pressing  key by manual.

With high temperature, low oil pressure and over speed during pump unit running, controller can protect it to stop quickly (please refer to No.2~7 of Auto start operation for detail procedures).
- MANUAL STOP: Press  can stop the running pump unit. (please refer to No.2~7 of Auto stop operation for detail procedures).

**▲NOTE:** In "manual mode", users can control the pump unit on load or off load via "Load" key.

## 4.6 ON-LOAD CONTROL PROCEDURE

When controller is in Manual mode, manual control will be executed. Users can control the pump unit on load or off load by pressing  key. The pump unit will unload automatically when it stops.

If **"Idle Run without Load"** is selected "Disable",

Start the pump unit in manual mode and press  key during the pump unit normal running, then the engine will take load; press  key again, the engine will unload and pump unit enters high speed running.

If **"Idle Run without Load"** is selected "Enable",

Start the pump unit in manual mode and it enters into idle running process. The pump unit will not enter into normal running status until  key is pressed and it will take load as soon as the on-load

requirements have reached. When the pump unit is normally running with load, press  key once again will lead to the unit's offload (i.e. load relay deactivated); then the "cooling delay" will be initiated. Once this has expired, the unit will enter into idle running status.

When controller is in Auto mode, auto control will be executed. The pump unit will take load automatically when it is normally running and the on-load requirements have reached while unload automatically when it stops.

## 4.7 ADJUST SPEED CONTROL PROCEDURE

Users can set the outlet pressure as the rated value simply by adjusting the engine speed. The “Adjust Speed Control” was divided into auto control and manual control.

**Manual Adjust Speed:** Adjust Speed mode is selected by pressing the  button; In this interface, users can adjust speed using navigational button: , manual adjust speed; , auto adjust speed; , manual raise speed; , manual drop speed. “, manual raise speed” and “, manual drop speed” buttons are active only when pump unit is normal running under “Manual Adjust Speed” mode.

**Auto Adjust Speed:** Under this mode, during the unit is normal running, the controller will automatically adjust the outlet pressure/inlet pressure according to the pre-set value to rated speed and maintain it steadily.

The “Auto Adjust Speed” was divided into relay adjust speed, GOV adjust speed and CAN adjust speed.

**Relay Adjust Speed:** Control the engine servo motor simply by using speed raise relay and speed drop relay.

**GOV Adjust Speed:** Control the electronic speed regulator simply by using GOV analog signal. Users should set parameters according to the actual situation as different GOVs have different parameters.

**CAN Adjust Speed:** Control the ECU engine speed simply by using CAN interface. Parameters setting and speed adjustment method are same as GOV. SW1 should set as 5.0 and SW2 as 2.0 while adjusting.

## 5 PROTECTION

### 5.1 WARNINGS

When controller detects warnings, it only sends warning signal but not shut down the unit.

**Table 7 Warning Alarms**

No.	Type	Description
1	Over Speed	When the controller detects that the engine speed has exceeded the pre-set value, it will initiate a warning alarm.
2	Under Speed	When the controller detects that the engine speed has fallen below the pre-set value, it will initiate a warning alarm.
3	Loss of Speed Signal	When the controller detects that the engine speed is 0 and the action selects "Warn", it will initiate a warning alarm.
4	Fail To Stop	After "fail to stop" delay, if unit is not stop completely, it will initiate a warning alarm.
5	Charge Alt Fail	When the controller detects that charger voltage has fallen below the pre-set value, it will initiate a warning alarm.
6	Battery 1 Over Voltage	When the controller detects that battery 1 voltage has exceeded the pre-set value, it will initiate a warning alarm.
7	Battery 1 Under Voltage	When the controller detects that battery 1 voltage has fallen below the pre-set value, it will initiate a warning alarm.
8	Maintenance Due	When maintenance countdown time is 0 and the action selects "Warn", it will initiate a warning alarm.
9	ECU Warn	If an error message is received from ECU via J1939, it will initiate a warning alarm.
10	Temp. Sensor Open	When the controller detects that the temperature sensor is open circuit and the action selects "Warn", it will initiate a warning alarm.
11	High Temperature	When the controller detects that engine temperature has exceeded the pre-set value, it will initiate a warning alarm.
12	Low Temperature	When the controller detects that engine temperature has fallen below the pre-set value, it will initiate a warning alarm.
13	Oil Pressure Sensor Open	When the controller detects that the oil pressure sensor is open circuit and the action select "Warn", it will initiate a warning alarm.
14	Low Oil Pressure	When the controller detects that the oil pressure has fallen below the pre-set value, it will initiate a warning alarm.
15	Level Sensor Open	When the controller detects that the level sensor is open circuit and the action selects "Warn", it will initiate a warning alarm.
16	Low Fuel Level	When the controller detects that the fuel level has fallen below the pre-set value, it will initiate a warning alarm.
17	Flexible Sensor 1~6 Open	When the controller detects that the sensor is open circuit and the action selects "Warn", it will initiate a warning alarm.
18	Flexible Sensor 1~6 High	When the controller detects the sensor value is higher than the max.

No.	Type	Description
		set value, it will initiate a warning alarm.
19	Flexible Sensor 1~6 Low	When the controller detects the sensor value is lower than the min. set value, it will initiate a warning alarm.
20	Digital Input 1~9 Warn	When the action of digital input port select "Warn" and active, it will initiate a warning alarm.
21	Battery 2 Over Voltage	When the controller detects that battery 2 voltage has exceeded the pre-set value, it will initiate a warning alarm.
22	Battery 2 Under Voltage	When the controller detects that battery 2 voltage has fallen below the pre-set value, it will initiate a warning alarm.
23	Outlet Pressure Sensor Open	When the controller detects that the outlet pressure sensor is open circuit and the action selects "Warn", it will initiate a warning alarm.
24	Outlet Pressure Sensor High	When the controller detects the sensor value is higher than the max. set value, it will initiate a warning alarm.
25	Outlet Pressure Sensor Low	When the controller detects the sensor value is lower than the min. set value, it will initiate a warning alarm.
26	Over Flow Warn	When the controller detects the flow value is higher than the max. set value, it will initiate a warning alarm.
27	Gearbox Over speed	When the controller detects that the gearbox speed has exceeded the pre-set value, it will initiate a warning alarm.
28	Gearbox Under speed	When the controller detects that the gearbox speed has fallen below the pre-set value, it will initiate a warning alarm.
29	Authorization Time Due	When the mandate time has expired and the action selects "Warn", it will initiate a warning alarm.

## 5.2 SHUTDOWN ALARM

When controller detects shutdown alarm, it will send signal to open breaker and stop the unit. Shutdown alarm must be cleared manually and the fault removed to reset the module.

**Table 8 Shutdown Alarm**

No.	Type	Description
1	Emergency Stop	When the controller detects an emergency stop alarm signal, it will initiate a shutdown alarm.
2	Over Speed	When the controller detects that the generator speed has exceeded the pre-set value, it will initiate a shutdown alarm.
3	Under Speed	When the controller detects that the generator speed has fallen below the pre-set value, it will initiate a shutdown alarm.
4	Loss of Speed Signal	When the controller detects that the engine speed is 0 and the action selects "Shutdown", it will initiate a shutdown alarm.
5	Maintenance Due	When maintenance countdown time is 0 and the action selects "Shutdown", it will initiate a shutdown alarm.
6	ECU Shutdown	If shutdown alarm signal is received from ECU via J1939, it will initiate a shutdown alarm.
7	ECU Fail	If the module does not detect the J1939 data, it will initiate a shutdown alarm.
8	Temp. Sensor Open	When the controller detects that the temperature sensor is open circuit and the action selects "Shutdown", it will initiate a shutdown alarm.
9	High Temperature	When the controller detects that engine temperature has exceeded the pre-set value, it will initiate a shutdown alarm.
10	Oil Pressure Sensor Open	When the controller detects that the oil pressure sensor is open circuit and the action selects "Shutdown", it will initiate a shutdown alarm.
11	Low Oil Pressure	When the controller detects that the oil pressure has fallen below the pre-set value, it will initiate a shutdown alarm.
12	Level Sensor Open	When the controller detects that the sensor is open circuit and the action selects "Shutdown", it will initiate a shutdown alarm.
13	Flexible Sensor 1~6 Open	When the controller detects that the sensor is open circuit and the action selects "Shutdown", it will initiate a shutdown alarm.
16	Flexible Sensor 1~6 High	When the controller detects the sensor value is higher than the max. set value, it will initiate a shutdown alarm.
17	Flexible Sensor 1~6 Low	When the controller detects the sensor value is lower than the min. set value, it will initiate a shutdown alarm.

No.	Type	Description
18	Digital Input 1~9 Shutdown	When the action of digital input port selects "Shutdown" and active, it will initiate a shutdown alarm.
19	Outlet Pressure Sensor Open	When the controller detects that the outlet pressure sensor is open circuit and the action selects "Shutdown", it will initiate a shutdown alarm.
20	Outlet Pressure Sensor High	When the controller detects the sensor value is higher than the max. set value, it will initiate a shutdown alarm.
21	Outlet Pressure Sensor Low	When the controller detects the sensor value is lower than the min. set value, it will initiate a shutdown alarm.
22	Over Flow Shutdown	When the controller detects the flow value is higher than the max. set value, it will initiate a shutdown alarm.
23	Gearbox Over speed	When the controller detects that the gearbox speed has exceeded the pre-set value, it will initiate a shutdown alarm.
24	Gearbox Under speed	When the controller detects that the gearbox speed has fallen below the pre-set value, it will initiate a shutdown alarm.
25	Authorization Time Due	When the mandate time has expired and the action selects "Shutdown", it will initiate a shutdown alarm.

### 5.3 COOLING SHUTDOWN ALARM

On initiation of the “cooling shutdown” condition, the controller will de-energize the load output to remove the load from the unit. Once this has occurred, the controller will start the Cooling delay and allow the engine to cool before shutting down the engine. This alarm must be cleared manually and the fault removed to reset the module.

**Table 9 Cooling Shutdown Alarm**

No.	Types	Description
1	Maintenance Due	When maintenance countdown time is 0 and the action selects “Cooling Shutdown”, it will initiate the corresponding alarm.
2	Digital Input 1~9	When the action of digital input port selects “Cooling Shutdown” and active, it will initiate the corresponding alarm.

### 5.4 FAULT IDLE ALARM

On initiation of the “fault idle” condition, the controller will de-energize the load output to remove the load from the unit. Once this has occurred, the controller will enter idle running after cooling delay. Fault idle alarm must be cleared by pressing “Mute” button more than 3s manually.

**Table 10 Fault Idle Alarm**

No.	Types	Description
1	Digital Input 1~9	When the action of digital input port selects “Fault idle” and active, it will initiate a fault idle alarm.


### 5.5 INDICATION ALARM

On initiation of the indication alarm the controller does not perform any action, and the alarm information will be displayed on Alarm page.

**Table 11 Indication Alarm**

No.	Types	Description
1	Maintenance Due	When maintenance countdown time is 0 and the action selects “Indication”, it will initiate an indication alarm.
2	Digital Input 1~9	When the action of digital input port selects “Indication” and active, it will initiate an indication alarm.

**6 WIRING CONNECTION**

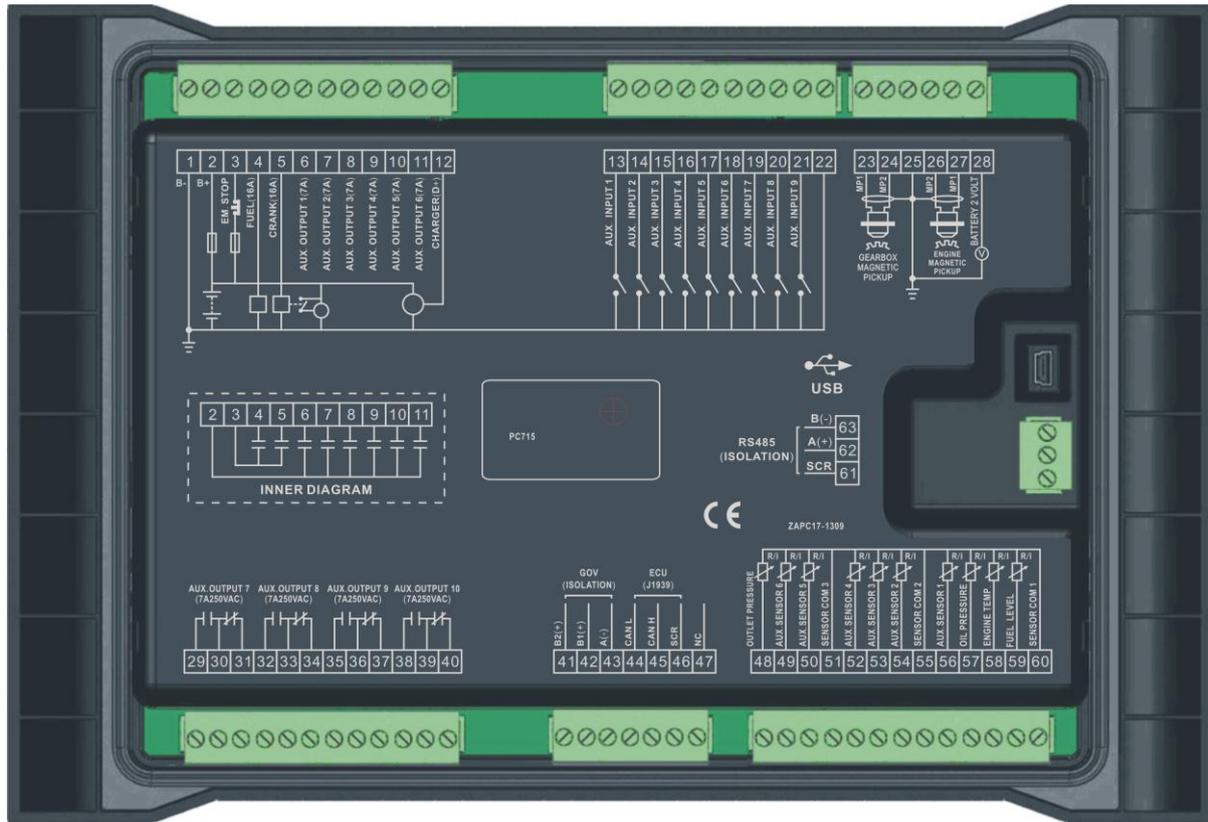

**Fig.2 Controller Back Panel**

**Table 12 Description of Terminal Connections**

No.	Function	Cable Size	Description	
1	B-	2.5mm <sup>2</sup>	Connected with negative of starter battery.	
2	B+	2.5mm <sup>2</sup>	Connected with positive of starter battery. If wire length is over 30m, better to double wires in parallel. Max. 20A fuse is recommended.	
3	Emergency Stop	2.5mm <sup>2</sup>	Connected with B+ power supply via emergency stop button.	
4	Fuel Relay Output	1.5mm <sup>2</sup>	B+ power is supplied by terminal 3, rated 16A	
5	Crank Relay Output	1.5mm <sup>2</sup>	B+ power is supplied by terminal 3, rated 16A	Connected to starter coil
6	Aux. Output 1	1.5mm <sup>2</sup>	B+ power is supplied by terminal 2, rated 7A	Details see table 14
7	Aux. Output 2	1.5mm <sup>2</sup>	B+ power is supplied by terminal 2, rated 7A	
8	Aux. Output 3	1.5mm <sup>2</sup>	B+ power is supplied by terminal 2, rated 7A	
9	Aux. Output 4	1.5mm <sup>2</sup>	B+ power is supplied by terminal 2, rated 7A	

No.	Function	Cable Size	Description
10	Aux. Output 5	1.5mm <sup>2</sup>	B+ power is supplied by terminal 2, rated 7A
11	Aux. Output 6	1.5mm <sup>2</sup>	B+ power is supplied by terminal 2, rated 7A
12	Charger(D+)	1.0mm <sup>2</sup>	Connected with charger starter's D+ (WL) terminals. Being hang up If there is no this terminal.
13	Aux. Input 1	1.0mm <sup>2</sup>	Ground connected is active (B-)
14	Aux. Input 2	1.0mm <sup>2</sup>	Ground connected is active (B-)
15	Aux. Input 3	1.0mm <sup>2</sup>	Ground connected is active (B-)
16	Aux. Input 4	1.0mm <sup>2</sup>	Ground connected is active (B-)
17	Aux. Input 5	1.0mm <sup>2</sup>	Ground connected is active (B-)
18	Aux. Input 6	1.0mm <sup>2</sup>	Ground connected is active (B-)
19	Aux. Input 7	1.0mm <sup>2</sup>	Ground connected is active (B-)
20	Aux. Input 8	1.0mm <sup>2</sup>	Ground connected is active (B-)
21	Aux. Input 9	1.0mm <sup>2</sup>	Ground connected is active (B-)
22	Common GND (B-)	1.0mm <sup>2</sup>	(B-) has already connected internally.
23	Gearbox Magnetic Pickup 1	0.5mm <sup>2</sup>	Connected with Gearbox Speed Sensor, shielding line is recommended. (B-) has already connected with speed sensor 2 internally.
24	Gearbox Magnetic Pickup 2		
25	Magnetic Pickup GND		(B-) has already connected with ground internally.
26	Engine Magnetic Pickup 2	0.5mm <sup>2</sup>	Connected with Engine Speed Sensor, shielding line is recommended. (B-) has already connected with speed sensor 2 internally.
27	Engine Magnetic Pickup 1		
28	Battery 2 Volt	1.0mm <sup>2</sup>	Connected with positive of battery 2.
29	Aux. Output 7	1.5mm <sup>2</sup>	Normally close output, rated 7A
30			Public points of relay
31			Normally open output, rated 7A
32	Aux. Output 8	1.5mm <sup>2</sup>	Normally close output, rated 7A
33			Public points of relay
34			Normally open output, rated 7A
35	Aux. Output 9	1.5mm <sup>2</sup>	Normally close output, rated 7A
36			Public points of relay
37			Normally open output, rated 7A
38	Aux. Output 10	1.5mm <sup>2</sup>	Normally close output, rated 7A
39			Public points of relay
40			Normally open output, rated 7A
41	GOV B2+	0.5mm <sup>2</sup>	120kΩ resistor had been connected between it and GOV B1(+) internally.
42	GOV B1+	0.5mm <sup>2</sup>	2-core shielding wire is recommended, its GOV end shall

Details see table 15

Details see table 14

No.	Function	Cable Size	Description
43	GOV A-	0.5mm <sup>2</sup>	be earth connected.
44	ECU CAN L	0.5mm <sup>2</sup>	Impedance-120Ω shielding wire is recommended, its single-end earthed. 120Ω matched resistance has already connected internally.
45	ECU CAN H	0.5mm <sup>2</sup>	
46	ECU CAN COM	/	
47	NC		Empty
48	Outlet Pressure Sensor	1.0mm <sup>2</sup>	Connect to outlet pressure sensor
49	Aux. sensor 6	1.0mm <sup>2</sup>	Spare sensor of pump unit
50	Aux. sensor 5	1.0mm <sup>2</sup>	
51	Sensor COM 3	1.0mm <sup>2</sup>	Public terminal of sensor, (B-) has already connected internally.
52	Aux. sensor 4	1.0mm <sup>2</sup>	Spare sensor of pump unit
53	Aux. sensor 3	1.0mm <sup>2</sup>	
54	Aux. sensor 2	1.0mm <sup>2</sup>	
55	Sensor COM 2	1.0mm <sup>2</sup>	Public terminal of sensor, (B-) has already connected.
56	Aux. sensor 1	1.0mm <sup>2</sup>	Spare sensor of engine
57	Oil pressure sensor	1.0mm <sup>2</sup>	Connected to oil pressure sensor
58	Temperature sensor	1.0mm <sup>2</sup>	Connected to temperature sensor
59	Fuel level sensor	1.0mm <sup>2</sup>	Connected to fuel level sensor
60	Sensor COM 1	1.0mm <sup>2</sup>	Public terminal of sensor, (B-) has already connected internally.
61	RS485 GND	/	Impedance-120Ω shielding wire is recommended, its single-end earthed.
62	RS485+	0.5mm <sup>2</sup>	
63	RS485-	0.5mm <sup>2</sup>	

Details see table 16

**▲NOTE:** USB ports in controller rear panel are programmable parameter ports, user can directly configure controller via PC in stop mode.

## 7 DEFINITION AND RANGE OF PARAMETERS

### 7.1 PARAMETER CONTENTS AND RANGES

**Table 13 Parameter Contents and Ranges**

No.	Items	Parameter	Default	Description
<b>Timer Setting</b>				
1	Start Delay	(0-3600)s	1	Time from remote start signal is active to start the pump unit.
2	Stop Delay	(0-3600)s	1	Time from remote start signal is deactivated to stop the pump unit.
3	Preheat Delay	(0-3600)s	0	Time of pre-powering heat plug before starter is powered up.
4	Cranking Time	(3-60)s	8	Time of starter power up.
5	Crank Rest Time	(3-60)s	10	The waiting time before second power up when engine start fail.
6	Safety On Delay	(0-3600)s	10	Alarms for low oil pressure, high temperature, under speed, under frequency/voltage, charge failure are inactive.
7	Start Idle Time	(0-3600)s	0	Idle running time of the pump unit when starting.
8	Warming Up Time	(0-3600)s	10	Warming time between the pump unit take load and high speed running.
9	Cooling Time	(0-3600)s	10	Radiating time before stop the pump unit, after it unloads.
10	Stop Idle Time	(0-3600)s	0	Idle running time when pump unit stop.
11	ETS Solenoid Hold	(0-3600)s	20	Stop electromagnet's power on time when pump unit is stopping.
12	Fail to Stop Delay	(0-3600)s	0	Time between ending of pump unit idle delay and stopped when "ETS output time" is set as 0; Time between ending of ETS hold delay and stopped when "ETS output time" is not 0.
13	After Stop Time	(0-3600)s	0	Time between pump unit stopped and standby.
<b>Engine Setting</b>				
1	Engine Type	(0-39)	0	Default: Conventional engine (not J1939). When connected to J1939 engine, choose the corresponding type.
2	Flywheel Teeth	(10-300)	118	Tooth number of the engine, for judging of starter separation conditions and inspecting of engine speed. See the following Installation Instruction.
3	Rated Speed	(0-6000)RPM	1500	Offer standard to judge over/under/loading

No.	Items	Parameter	Default	Description
				speed.
4	Speed on Load	(0-1000)%	90%	Setting value is percentage of rated speed. Controller detects when it is ready to load. It won't enter into normal running process when speed is lower than loading speed.
5	Loss of Speed Signal	(0-3600)s	5	Time from detecting speed is 0 to confirm the action.
6	Loss of Speed Action	(0-1)	0	0: Warn; 1: Shutdown
7	Over Speed Shutdown	(0-1000)%	114%	Setting value is percentage of rated speed and delay value can be set.
8	Under Speed Shutdown	(0-1000)%	80%	
9	Over Speed Warn	(0-1000)%	110%	Setting value is percentage of rated speed. Delay value and return value can be set.
10	Under Speed Warn	(0-1000)%	86%	
11	Battery 1 Rated Voltage	(0-60.0)V	24.0	Standard for detecting over/under voltage of battery.
12	Battery 1 Over Volts	(0-1000)%	120%	Setting value is percentage of rated voltage of battery. Delay value & return value can be set.
13	Battery 1 Under Volts	(0-1000)%	85%	
14	Battery 2 Rated Voltage	(0-60.0)V	24.0	Standard for detecting over/under voltage of battery.
15	Battery 2 Over Volts	(0-1000)%	120%	Setting value is percentage of rated voltage of battery. Delay value & return value can be set.
16	Battery 2 Under Volts	(0-1000)%	85%	
17	Charge Alt Fail	(0-60.0)V	8.0	In normal running, when charger D+(WL) voltage under this value, charge failure alarms.
18	Start Attempts	(1-10)times	3	Max. crank attempts. When reach this number, controller will send start failure signal.
19	Crank Disconnect	(0-2)	2	See table 17. There are 3 conditions of disconnecting starter with engine. Each condition can be used alone and simultaneously to separating the start motor and genset as soon as possible.
20	Disconnect Engine Speed	(0-1000)%	24%	Setting value is percentage of rated speed. When engine speed is higher than the set value, starter will be disconnected. See the following Installation Instruction.
21	Disconnect Oil Pressure	(0-1000)kPa	200	When engine oil pressure is higher than the set value, starter will be disconnected. See the following Installation Instruction.
22	After Unload Idle	(0-1)	0	0: Disable; 1: Enable

No.	Items	Parameter	Default	Description
				Active when system is in manual mode. After start the unit, it enters into idle running when the unit is not on-load.
23	Engine Idle Set	(0-100)%	60	Setting value is percentage of rated speed. Stabilize the engine speed on the set value if idle running is needed.
<b>Module Setting</b>				
1	Power on Mode	(0-2)	0	0: Stop mode 1: Manual mode 2: Auto mode
2	Module Address	(1-254)	1	Controller's address during remote sensing.
3	Stop Bits	(0-1)	0	0: 2 stop bits; 1: 1 stop bit
4	Language	(0-2)	0	0: Simplified Chinese 1: English 2: Others
5	Password	(0-65535)	00318	For entering advanced parameters setting.
6	Time and Date			User can calibrate date and time manually.
<b>Scheduling And Maintenance Setting</b>				
1	Scheduled Run	(0-1)	0	0: Disable; 1: Enable
2	Scheduled Not Run	(0-1)	0	0: Disable; 1: Enable
3	Maintenance 1	(0-1)	0	0: Disable; 1: Enable
4	Maintenance 2	(0-1)	0	Users can set maintenance time, maintenance due action, pre-alarm A, pre-alarm B, timing method and reset maintenance time. If maintenance due alarm occurs, users can reset maintenance alarm to remove it.
5	Maintenance 3	(0-1)	0	
6	Maintenance 4	(0-1)	0	
7	Maintenance 5	(0-1)	0	
<b>Analog Sensors Setting</b>				
<b>Temperature Sensor</b>				
1	Curve Type	(0-15)	7	SGX. See table 17.
2	Open Action	(0-2)	0	0: Warn; 1: Shutdown; 2: No action
3	High Temp. Shutdown	(0~300)°C	98	Shutdown when external sensor temperature is higher than this value. Detecting only after safety delay is over. The delay value can be set.
4	High Temp. Warn	(0~300)°C	95	Warn when external sensor temperature is higher than this value. Detecting only after safety delay is over. The delay value and return value can be set.
5	Low Temp. Warn	(0-1)	0	0: Disable; 1: Enable
6	Custom Curve			Users should set the corresponding curve when select resistor curve type or current curve type.
<b>Oil Pressure Sensor</b>				
1	Curve Type	(0-15)	7	SGX. See table 17.
2	Open Action	(0-2)	0	0: Warn; 1: Shutdown; 2: No action
3	Low OP Shutdown	(0-1000)kPa	103	Shutdown when external oil pressure is lower than this value. Detecting only after safety delay is over. The delay value can be set.

No.	Items	Parameter	Default	Description
4	Low OP Warn	(0-1000)kPa	124	Warn when external oil pressure is higher than this value. Detecting only after safety delay is over. The delay value and return value can be set.
5	Custom Curve			Users should set the corresponding curve when select resistor curve type or current curve type.
<b>Level Sensor</b>				
1	Curve Type	(0-15)	4	SGH. See table 17.
2	Open Action	(0-2)	0	0: Warn; 1: Shutdown; 2: No action
3	Low Level Warn	(0-1000)%	10	Warn when external level is lower than this value. It is detecting all the time. The delay value and return value can be set.
4	Custom Curve			Users should set the corresponding curve when select resistor curve type or current curve type.
<b>Flexible Sensor 1~6</b>				
1	Flexible Sensor Setting	(0-1)	0	0: Disable; 1: Enable (can be set as temperature/oil pressure/ lever sensor)
2	Curve Type			Depends on sensor type.
3	Open Action	(0-2)	0	0: Warn; 1: Shutdown; 2: No action
4	High Shutdown	(0-9000)	100	Shutdown when external sensor value is higher than this value. The delay value and "warn enable" can be set.
5	Low Shutdown	(0-9000)	10	Shutdown when external sensor value is lower than this value. The delay value and "warn enable" can be set.
6	High Warn	(0-9000)	90	Warn when external sensor value is higher than this value. The delay value, "warn enable" and return value can be set.
7	Low Warn	(0-9000)	20	Warn when external sensor value is lower than this value. The delay value, "warn enable" and return value can be set.
8	Custom Curve			Users should set the corresponding curve when select resistor curve type or current curve type.
<b>Outlet Pressure Sensor</b>				
1	Curve Type	(0-15)	2	
2	Open Action	(0-2)	1	0: Warn; 1: Shutdown; 2: No action
3	High Shutdown	(0-9000)%	120	Shutdown when external sensor value is higher than this value. The delay value and "warn enable" can be set.
4	Low Shutdown	(0-9000)%	10	Shutdown when external sensor value is lower than this value. The delay value and "warn enable" can be set.

No.	Items	Parameter	Default	Description
5	High Warn	(0-9000)%	110	Warn when external sensor value is higher than this value. The delay value, "warn enable" and return value can be set.
6	Low Warn	(0-9000)%	20	Warn when external sensor value is lower than this value. The delay value, "warn enable" and return value can be set.
7	Custom Curve			Users should set the corresponding curve when select resistor curve type or current curve type.
8	Rated Outlet Pressure	(0-9000)kPa	1000	Set the outlet port's rated working pressure of pump unit.
9	Static Pressure	(0-9000)kPa	0	Set the outlet port's static water pressure of pump unit.
10	Flow Enable	(0-1)	0	0: Disable; 1: Enable
11	Rated Flow	(0-10000)m <sup>3</sup> /h	1000	Pump unit's rated working pressure.
12	Over Flow Warn	(0-1000)%	110	During normal running process, it will initiate a warning alarm signal when flow value has exceeded the set value. The delay value, "warn enable" and return value can be set.
13	Over Flow Shut	(0-1000)%	120	During normal running process, it will initiate a shutdown alarm signal when flow value has exceeded the set value. The "warn enable" and delay value can be set.
14	Flow Curve			Different outlet pressures correspond to different flow value.
<b>Flexible Input Ports</b>				
Flexible Input Port 1				
1	Contents Setting	(0-53)	28	Remote start (on load). See table 15.
2	Active Type	(0-1)	0	0: Closed to active 1: Open to active
Flexible Input Port 2				
1	Contents Setting	(0-53)	26	High temperature shutdown. See table 15.
2	Active Type	(0-1)	0	0: Closed to active 1: Open to active
Flexible Input Port 3				
1	Contents Setting	(0-53)	27	Low oil pressure shutdown. See table 15.
2	Active Type	(0-1)	0	0: Closed to active 1: Open to active
Flexible Input Port 4				
1	Contents Setting	(0-53)	0	User defined. See table 15.
2	Active Type	(0-1)	0	0: Closed to active 1: Open to active
3	Arming	(0-3)	2	0: From safety on 1: From starting 2: Always 3: Never
4	Active Actions	(0-4)	0	0: Warn; 1: Shutdown; 2: Trip Shutdown 3: Fault Idle 4: Indication

No.	Items	Parameter	Default	Description
5	Active Delay	(0-20.0)s	2.0	Time from detecting active to confirm.
6	Description			User defined.
<b>Flexible Input Port 5</b>				
1	Contents Setting	(0-53)	0	User defined. See table 15.
2	Active Type	(0-1)	0	0: Closed to active 1: Open to active.
3	Arming	(0-3)	2	0: From safety on 1: From starting 2: Always 3: Never
4	Active Actions	(0-4)	0	0: Warn; 1: Shutdown; 2: Trip Shutdown 3: Fault Idle 4: Indication
5	Active Delay	(0-20.0)s	2.0	Time from detecting active to confirm.
6	Description			User defined.
<b>Flexible Input Port 6</b>				
1	Contents Setting	(0-53)	0	User defined. See form 3.
2	Active Type	(0-1)	0	0: Closed to active 1: Open to active
3	Arming	(0-3)	2	0: From safety on 1: From starting 2: Always 3: Never
4	Active Actions	(0-4)	1	0: Warn; 1: Shutdown; 2: Trip Shutdown 3: Fault Idle 4: Indication
5	Active Delay	(0-20.0)s	2.0	Time from detecting active to confirm.
6	Description			User defined.
<b>Flexible Input Port 7</b>				
1	Contents Setting	(0-53)	5	Lamp Test. See table 15.
2	Active Type	(0-1)	0	0: Closed to active 1: Open to active
<b>Flexible Input Port 8~9</b>				
1	Contents Setting	(0-53)	0	User defined. See table 15.
2	Active Type	(0-1)	0	0: Closed to active 1: Open to active
3	Arming	(0-3)	0	0: From safety on 1: From starting 2: Always 3: Never
4	Active Actions	(0-4)	0	0: Warn; 1: Shutdown; 2: Trip Shutdown 3: Fault Idle 4: Indication
5	Active Delay	(0-20.0)s	2.0	Time from detecting active to confirm.
6	Description			User defined.
<b>Flexible Output Ports</b>				
<b>Flexible Output Port 1</b>				
1	Contents Setting	(0-239)	1	User defined period output (default output is in preheating) See table 16.
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
<b>Flexible Output Port 2</b>				
1	Contents Setting	(0-239)	35	Idle speed control. See table 16.
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
<b>Flexible Output Port 3</b>				
1	Contents Setting	(0-239)	29	On-load control. See table 16.

No.	Items	Parameter	Default	Description
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
<b>Flexible Output Port 4</b>				
1	Contents Setting	(0-239)	31	Reserved. See table 16.
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
<b>Flexible Output Port 5</b>				
1	Contents Setting	(0-239)	38	ETS solenoid hold. See table 16.
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
<b>Flexible Output Port 6</b>				
1	Contents Setting	(0-239)	48	Common alarm. See table 16.
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
<b>Flexible Output Port 7~10</b>				
1	Contents Setting	(0-239)	0	Not used. See table 16.
2	Active Type	(0-1)	0	0: Normally open; 1: Normally close
<b>GOV Setting</b>				
1	Adjust Speed Type	(0-2)	2	0: Not Used; 1: Relay Adjust Speed; 2: GOV Adjust Speed
2	GOV Output Reverse	(0-1)	0	0: Disable; 1: Enable.
3	GOV Center Voltage SW1	(0-10.0)	0	Default central voltage: 0V
4	GOV Voltage Range SW2	(0-10.0)	2.0	Default volt. range: (-2.5~+2.5)V
5	GOV Gain	(0-100)	20	GOV gain control.
6	GOV Stability	(0-100)	20	GOV stability control.
7	Relay Adjust Speed Dead	(0-10.0)%	1.0	Relay auto speed control.
8	Relay Gain	(0-100)%	10	
9	Relay Stability	(0.05-1.60)s	0.10	
10	Relay Response	(0.25-4.00)	0.5	
11	Adjust Speed Object	(0-1)	0	0: Outlet Pressure; 1: Inlet Pressure Configurable sensor 2 is regarded as inlet pressure sensor if the object is set as "Inlet Pressure".
12	Inlet Pressure Stability	(0-2000)kPa	10	Stabilize the inlet pressure on the set value if the object is set as "Inlet Pressure".
<b>Pump Unit Setting</b>				
1	Speed Enabled	(0-1)	0	0: Disable; 1: Enable.
2	Flywheel Teeth	(1-300)	118	Tooth number of the engine.
3	Rated Speed	(0-6000)RPM	500	Offer standard to judge over/under speed.
4	Over Speed Shut	(0-1000)%	114%	Setting value is percentage of rated speed and delay value can be set.
5	Under Speed Shut	(0-1000)%	80%	
6	Over Speed Warn	(0-1000)%	110%	Setting value is percentage of rated speed.
7	Under Speed Warn	(0-1000)%	86%	Delay value and return value can be set.

**7.2 DEFINED CONTENTS OF PROGRAMMABLE OUTPUT PORTS**

**7.2.1 DEFINED CONTENTS OF PROGRAMMABLE OUTPUT PORTS**

**Table 14 Defined Contents of Programmable Output Ports**

No.	Type	Description
0	Not Used	
1	Custom Period 1	Details of function description please see the following.
2	Custom Period 2	
3	Custom Period 3	
4	Custom Period 4	
5	Custom Period 5	
6	Custom Period 6	
7	Custom Combined 1	
8	Custom Combined 2	
9	Custom Combined 3	
10	Custom Combined 4	
11	Custom Combined 5	
12	Custom Combined 6	
13	Reserved	
14	Reserved	
15	Reserved	
16	Start Relay B	If "Start Relay B" is configured, start relay and start relay B will output alternately in multi-startup process; can be used to control double power supply ATS.
17	Air Flap	Action when over speed shutdown and emergence stop. It can close the air inflow to stop the engine as soon as possible.
18	Audible Alarm	Action when warning or shutdown occurs. Can be connected annunciator externally. When "alarm mute" input port is active, the alarm will be prohibit.
19	Louver Control	Action in genset starting and disconnect when genset stopped completely.
20	Fuel Pump Control	It is controlled by fuel pump of level sensor's limited threshold.
21	Heater Control	It is controlled by heating of temperature sensor's limited threshold.
22	Cooler Control	It is controlled by cooler of temperature sensor's limited threshold.
23	Oil Pre-supply	Actions in period of cranking to safety run.
24	Reserved	
25	Pre-Lubricate	Actions in period of pre-heating to safety run.

No.	Type	Description
26	Remote PC Output	This port is controlled by RS485 communication (PC).
27	Reserved	
28	Reserved	
29	On-load Output	Control generator to take load or off load.
30	Reserved	
31	Reserved	
32	Reserved	
33	Crank Relay	Action when genset is starting and disconnect when crank successful.
34	Fuel Relay	Action when genset is starting and disconnect when stop is completed.
35	Idle Control	Used for engine which has idles. Close before starting and open in warming up delay; Close during stopping idle process and open when stop is completed.
36	Raise Speed	Action in warming up delay and be controlled by GOV in normal running process.
37	Drop Speed	Action between the period from "stop idle" to "failed to stop" and be controlled by GOV in normal running process.
38	ETS Control	Used for engines with ETS electromagnet. Close when stop idle is over and open when pre-set "ETS delay" is over.
39	Pulse Drop Speed	Active 0.1s when controller enter into stop idle, used for control part of ECU dropping to idle speed.
40	ECU Stop	Suitable for engines which fitted with ECU; used for control ECU stop.
41	ECU Power Supply	Suitable for engines which fitted with ECU; used for control ECU power supply.
42	Pulse Raise Speed	Active 0.1s when controller enter into warming up delay; used for control part of ECU raising to normal speed.
43	Crank Success	Close when detects a successful start signal.
44	Reserved	
45	Reserved	
46	Reserved	
47	Start Battery Cycle	During cranking process, start battery will be switched circularly if multiple crank is needed.
48	Common Alarm	Action when pump unit common warning, common shutdown alarm.
49	Common Trip	Action when common trip alarm.
50	Common Shutdown	Action when common shutdown alarm.
51	Common Fault Idle Alarm	Action when fault idle alarm.

No.	Type	Description
52	Common Warn Alarm	Action when common warning alarm.
53	Reserved	
54	Battery 1 High Volts	Action when battery 1 over voltage warning alarm.
55	Battery 1 Low Volts	Action when battery 1 low voltage warning alarm.
56	Charge Alt Fail	Action when charge failure warning alarms.
57	Reserved	
58	Reserved	
59	Reserved	
60	ECU Warn	Indicate ECU sends a warning signal.
61	ECU Shutdown	Indicate ECU sends a shutdown signal.
62	ECU Comm. Fail	Indicate controller cannot communicate with ECU.
63	Reserved	
64	Reserved	
65	Reserved	
66	Reserved	
67	Reserved	
68	Reserved	
69	Aux Input 1 Active	Action when input port 1 is active.
70	Aux Input 2 Active	Action when input port 2 is active.
71	Aux Input 3 Active	Action when input port 3 is active.
72	Aux Input 4 Active	Action when input port 4 is active.
73	Aux Input 5 Active	Action when input port 5 is active.
74	Aux Input 6 Active	Action when input port 6 is active.
75	Aux Input 7 Active	Action when input port 7 is active.
76	Aux Input 8 Active	Action when input port 8 is active.
77	Aux Input 9 Active	Action when input port 9 is active.
78~96	Reserved	
97	Battery 2 High Volts	Action when battery 2 over voltage warning alarm.
98	Battery 2 Low Volts	Action when battery 2 low voltage warning alarm.
99	Emergency Stop	Action when emergency stop alarm.
100	Failed to Start	Action when failed start alarm.
101	Failed to Stop	Action when failed stop alarm.
102	Under Speed Warn	Action when under speed warning.
103	Under Speed Shutdown	Action when under speed shuts down.
104	Over Speed Warn	Action when over speed warning.
105	Over Speed Shutdown	Action when over speed shutdown alarm.
106~138	Reserved	
139	High Temp Warn	Action when high temperature warning.
140	Low Temp Warn	Action when low temperature warning.
141	High Temp Shutdown	Action when hi-temperature shutdown alarm.
142	Reserved	
143	Low OP Warn	Action when low oil pressure warning.

No.	Type	Description
144	Low OP Shutdown	Action when low oil pressure shutdown.
145	OP Sensor Open	Action when oil pressure sensor is open circuit.
146	Reserved	
147	Low Fuel Level Warn	Action when low fuel level warning.
148	Over Flow Shutdown	Action when over flow shutdown.
149	Over Flow Warn	Action when over flow warning.
150	Config 1 High Warn	
151	Config 1 Low Warn	
152	Config 1 High Shut	
153	Config 1 Low Shut	
154	Config 2 High Warn	
155	Config 2 Low Warn	
156	Config 2 High Shut	
157	Config 2 Low Shut	
158	Config 3 High Warn	
159	Config 3 Low Warn	
160	Config 3 High Shut	
161	Config 3 Low Shut	
162	Config 4 High Warn	
163	Config 4 Low Warn	
164	Config 4 High Shut	
165	Config 4 Low Shut	
166	Config 5 High Warn	
167	Config 5 Low Warn	
168	Config 5 High Shut	
169	Config 5 Low Shut	
170	Config 6 High Warn	
171	Config 6 Low Warn	
172	Config 6 High Shut	
173	Config 6 Low Shut	
174	Outlet High Warn	
175	Outlet Low Warn	
176	Outlet High Shut	
177	Outlet Low Shut	
178~229	Reserved	
230	Stop Mode	Action in Stop mode.
231	Manual Mode	Action in Manual mode.
232	Reserved	
233	Auto Mode	Action in Auto mode.
234	Loading Indication	Indicate the system is on-load.
235~239	Reserved	

### 7.2.2 CUSTOM PERIOD OUTPUT

Defined period output is composed by 2 parts, period output S1 and condition output S2.



While S1 and S2 are **TRUE** synchronously, OUTPUT;

While S1 or S2 is **FALSE**, NOT OUTPUT.

Period output S1, can set pump unit's one or more period output freely, can set the delayed time and output time after enter into period.

Condition output S2, can set as any conditions in output ports.

**NOTE:** when delay time and output time both are 0 in period output S1, it is **TRUE** in this period.

Example,

Output period: start

Delay output time: 2s

Output time: 3s

Condition output contents: input port 1 is active


Close when condition output active/inactive: close when active (disconnect when inactive);

Output port 1 active, after enter "start time" and delay 2s, this defined period output is outputting, after 3s, stop outputting;

Output port 1 inactive, defined output period is not outputting.

### 7.2.3 CUSTOM COMBINED OUTPUT

Defined combination output is composed by 3 parts, OR condition output S1, OR condition output S2, AND condition output S3.

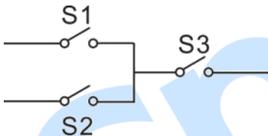

S1 or S2 is **TRUE**, while S3 is **TRUE**, defined combination output is outputting;

S1 and S2 are **FALSE**, or S3 is **FALSE**, defined combination output is not outputting.

**NOTE:** S1, S2, S3 can be set as any contents except for "defined combination output" in the output setting.

**NOTE:** 3 parts of defined combination output (S1, S2, S3) couldn't include or recursively include themselves.

Example,

Contents of OR condition output S1: input port 1 is active;

Close when OR condition output S1 is active /inactive: close when active (disconnect when inactive);

Contents of OR condition output S2, input port 2 is active;

Close when OR condition output S2 is active /inactive: close when active (disconnect when inactive);

Contents of AND condition output S3: input port 3 is active;

Close when AND condition output S3 is active /inactive: close when active (disconnect when inactive);

When input port 1 active or input port 2 active, if input port 3 is active, defined combination output is outputting; If input port 3 inactive, defined combination output is not outputting;

When input port 1 inactive and input port 2 inactive, whatever input port 3 is active or not, defined combination output is not outputting.

**7.3 DEFINED CONTENTS OF CONFIGURABLE INPUT PORTS (ALL GND(B-) ACTIVE)**

**Table 15 Defined Contents of Configurable Input Ports (All GND(B-) Active)**

No.	Type	Description
0	Users Configured	Including following functions, Indication: indicate only, not warning or shutdown. Warning: warn only, not shutdown. Shutdown: alarm and shutdown immediately Never: input inactive. Always: input is active all the time. From crank: detecting as soon as start. From safety on: detecting after safety on run delay.
1	Reserved	
2	Alarm Mute	Can prohibit "Audible Alarm" output when input is active.
3	Reset Alarm	Can reset shutdown alarm when input is active.
4	Reserved	
5	Lamp Test	All LED indicators are illuminating when input is active.
6	Panel Lock	All buttons in panel is inactive except      and there is  in the right of first row in LCD when input is active.
7	Crank Success	Means that the engine starts successfully when the input is active. Crank success condition judge are disabled if the "Crank Success" is configured.
8	Idle Control Mode	Under speed protection is inactive.
9	Inhibit Auto Stop	In <b>Auto</b> mode, during pump unit normal running, when input is active, inhibit pump unit shutdown automatically.
10	Inhibit Auto Start	In <b>Auto</b> mode, inhibit pump unit start automatically when input is active.
11	Inhibit Scheduled Start	In <b>Auto</b> mode, inhibit pump unit scheduled run when input is active.
12	Reserved	
13	Loading Status	Connect to Aux. Points of clutch.
14	Load Inhibit	Prohibit pump unit on-load when input is active.
15	Reserved	
16	Reserved	
17	Reserved	
18	Reserved	
19	Reserved	
20	Reserved	
21	Inhibit Alarm Shutdown	All shutdown alarms are prohibited except emergence stop. (Means battle mode)
22	Aux Instrument Mode	All outputs are prohibited in this mode.
23	Reserved	

No.	Type	Description
24	Reset Maintenance	Controller will reset maintenance 1 time and date as default when input is active.
25	Reserved	
26	Aux. High Temp	Connect to sensor digital input.
27	Aux. Low OP	Connect to sensor digital input.
28	Remote Start (On Load)	In <b>Auto</b> mode, when the input is active, pump unit can start automatically and take load after normal running.
29	Remote Start (Off Load)	In <b>Auto</b> mode, when the input is active, pump unit can start automatically and NOT take load after normal running.
30	Aux. Manual Start	In <b>Manual</b> mode, when the input is active, pump unit will start automatically; when input inactive, pump unit will stop automatically.
31	Reserved	
32	Remote Stop	In <b>Auto</b> mode, when the input is active as well as remote start signal is inactive, pump unit can be stopped automatically.
33	Simulate Stop key	An external button (not self-locking) can be connected and pressed as simulate panel.
34	Simulate Manual key	
35	Reserved	
36	Simulate Auto key	An external button (not self-locking) can be connected and pressed as simulate panel.
37	Simulate Start key	
38	Simulate Load key	
39~51	Reserved	
52	Speed Raise Input	An external button (not self-locking) can be connected and control GOV manually.
53	Speed Drop Input	

**7.4 SELECTION OF SENSORS**

**Table 16 Sensors Selection**

No.		Description	Remark
1	Temperature Sensor	0 Not used 1 Custom res curve 2 Custom 4-20mA curve 3 VDO 4 CURTIS 5 VOLVO-EC 6 DATCON 7 SGX 8 SGD 9 SGH 10 PT100 11~15 Reserved	Defined resistance's range is (0~6)kΩ, default is SGX sensor.
2	Pressure Sensor	0 Not used 1 Custom res curve 2 Custom 4-20mA curve 3 VDO 10Bar 4 CURTIS 5 VOLVO-EC 6 DATCON 10Bar 7 SGX 8 SGD 9 SGH 10~15 Reserved	Defined resistance's range is (0~6)kΩ, default is SGX sensor.
3	Fuel Level Sensor	0 Not used 1 Custom res curve 2 Custom 4-20mA curve 3 SGD 4 SGH 5~15 Reserved	Defined resistance's range is (0~6)kΩ, default is SGH sensor.

**NOTE:** User should take the controller apart to change the jumper hat from resistor side to current side if your pump unit fitted with 4~20mA sensor.


**7.5 CONDITIONS OF CRANK DISCONNECT SELECTION**

**Table 17 Crank Disconnect Conditions Selection**

No.	Setting Contents
0	Engine Speed
1	Oil pressure
2	Oil pressure + Engine Speed

**▲NOTE:**

1. There are 3 conditions to make starter disconnected with engine. Engine speed and oil pressure both can be used separately. We recommend that oil pressure should be used with engine speed together, in order to make the starter motor separated with engine immediately and can check crank disconnect exactly.
2. Engine speed is the magnetic equipment which be installed in starter for detecting flywheel teeth.
3. When set as engine speed, must ensure that the number of flywheel teeth is as same as setting, otherwise, "over speed shutdown" or "under speed shutdown" may be caused.
4. If pump unit without engine speed sensor, please don't select corresponding items, otherwise, "start fail" or "loss speed signal" maybe caused.
5. If pimp unit without oil pressure sensor, please don't select corresponding items.

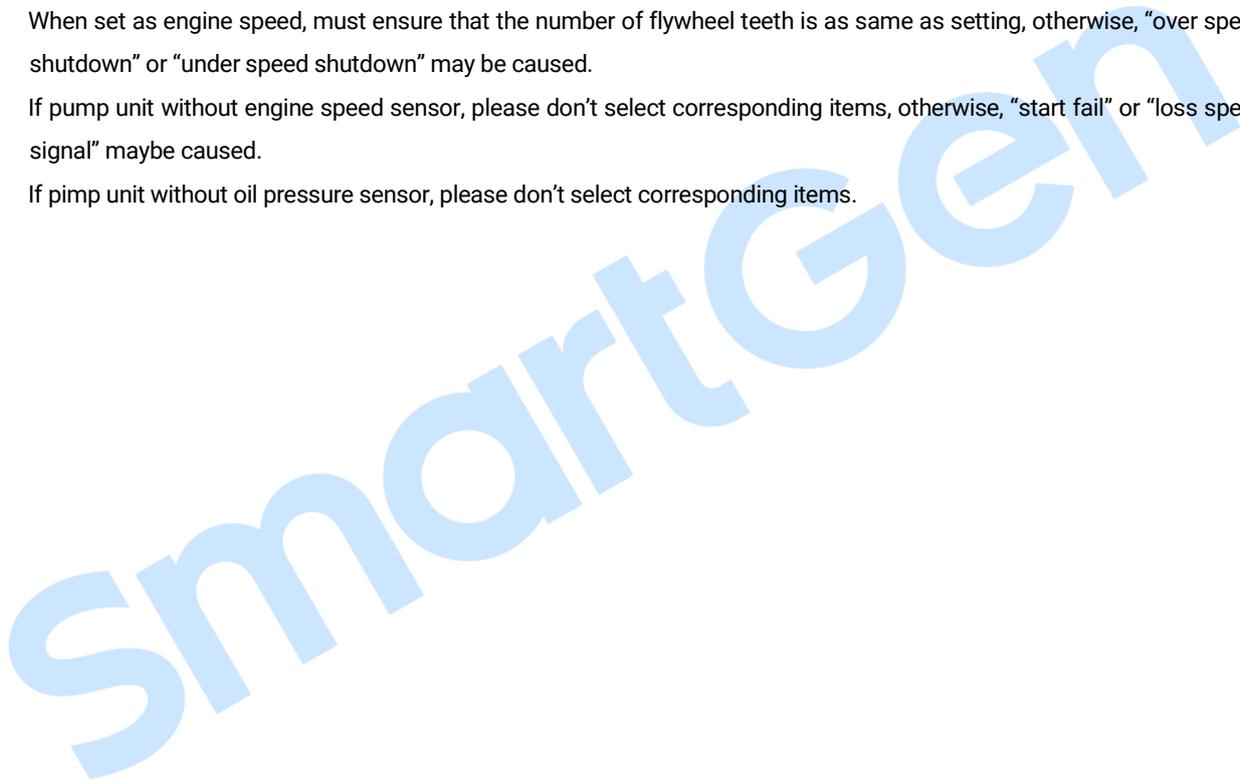

**7.6 MAINTENANCE SETTING**

**Table 18 Maintenance Setting**

Items	Content	Description
Enable Select	0: Disable; 1: Enable	Used for setting the current maintenance function.
Maintenance Interval	(0-30000)h	The time interval between two maintenance.
Maintenance Due Action	0: No Action; 1: Warn; 2: Shutdown; 3: Indication.	They are the alarm action types when the maintenance time is due.
Pre-alarm A	(0-30000)h	Maintenance remaining time.
Pre-alarm A Action	Same as maintenance due action.	Action when the maintenance remaining time is left pre-alarm A time only.
Pre-alarm B	(0-30000)h	Maintenance remaining time.
Pre-alarm B Action	Same as maintenance due action.	Action when the maintenance remaining time is left pre-alarm B time only.
Timer Mode	0: Running Time; 1: Real Time Clock	The maintenance timer mode.
Reset Maintenance Time		Reset maintenance alarm when the maintenance time is due.
Description		The maintenance name are user-set. E.g. Change oil.

## 8 PARAMETERS SETTING

**⚠ CAUTION:** Please change the controller parameters when generator is in standby mode only (e. g. Crank disconnect conditions selection, digital input, digital output, various delay), otherwise, shutdown and other abnormal conditions may occur.

**⚠ NOTE:** Maximum set value must over minimum set value in case that the condition of too high as well as too low will happen.


**⚠ NOTE:** When setting the warning alarm, please set the correct return value; otherwise, maybe there is abnormal alarm. When setting the maximum value, the return value must less than set value; When setting the minimum value, the return value must over than set value.

**⚠ NOTE:** Digital input could not be set as same items; otherwise, there are abnormal functions. However, the digital output can be set as same items.

SmartGen

**9 SENSOR SETTING**

- 1) When reselect sensors, the sensor curve will be transferred into the standard value. For example, if temperature sensor is SGX (120°C resistor type), its sensor curve is SGX (120°C resistor type); if select the SGD (120°C resistor type), the temperature sensor curve is SGD curve.
- 2) When there is difference between standard sensor curves and using sensor, user can adjust it in "curve type".
- 3) When input the sensor curve, X value (resistor) must be input from small to large, otherwise, mistake occurs.
- 4) If select sensor type as "None", sensor curve is not working and LCD does not display the sensor information.
- 5) If there is alarm switch only for the select sensor, user must set the sensor as "None", otherwise, maybe shutdown or warning occurs.
- 6) The headmost or backmost values in the vertical coordinates can be set as same as below,

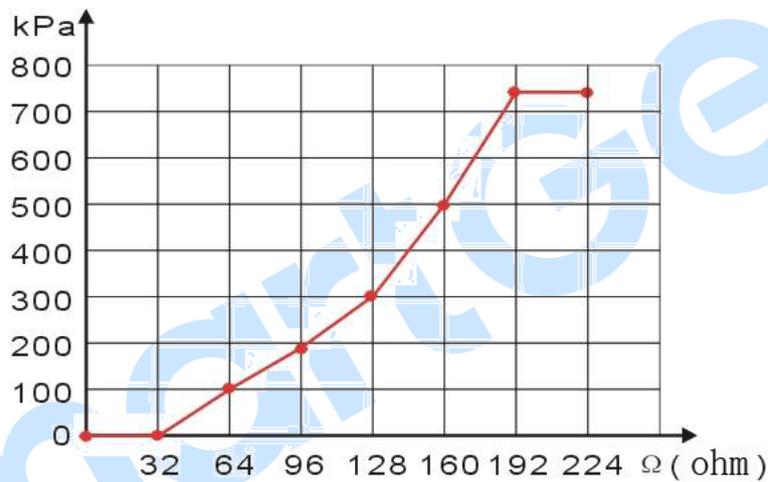


**Fig.3 Sensor Curve**

**Table 19 Common Unit Pressure Conversion Table**

	N/m <sup>2</sup> (pa)	kgf/cm <sup>2</sup>	bar	(p/in <sup>2</sup> .psi)
1Pa	1	1.02x10 <sup>-5</sup>	1x10 <sup>-5</sup>	1.45x10 <sup>-4</sup>
1kgf/cm <sup>2</sup>	9.8x10 <sup>4</sup>	1	0.98	14.2
1bar	1x10 <sup>5</sup>	1.02	1	14.5
1psi	6.89x10 <sup>3</sup>	7.03x10 <sup>-2</sup>	6.89x10 <sup>-2</sup>	1


**10 TYPICAL APPLICATION**

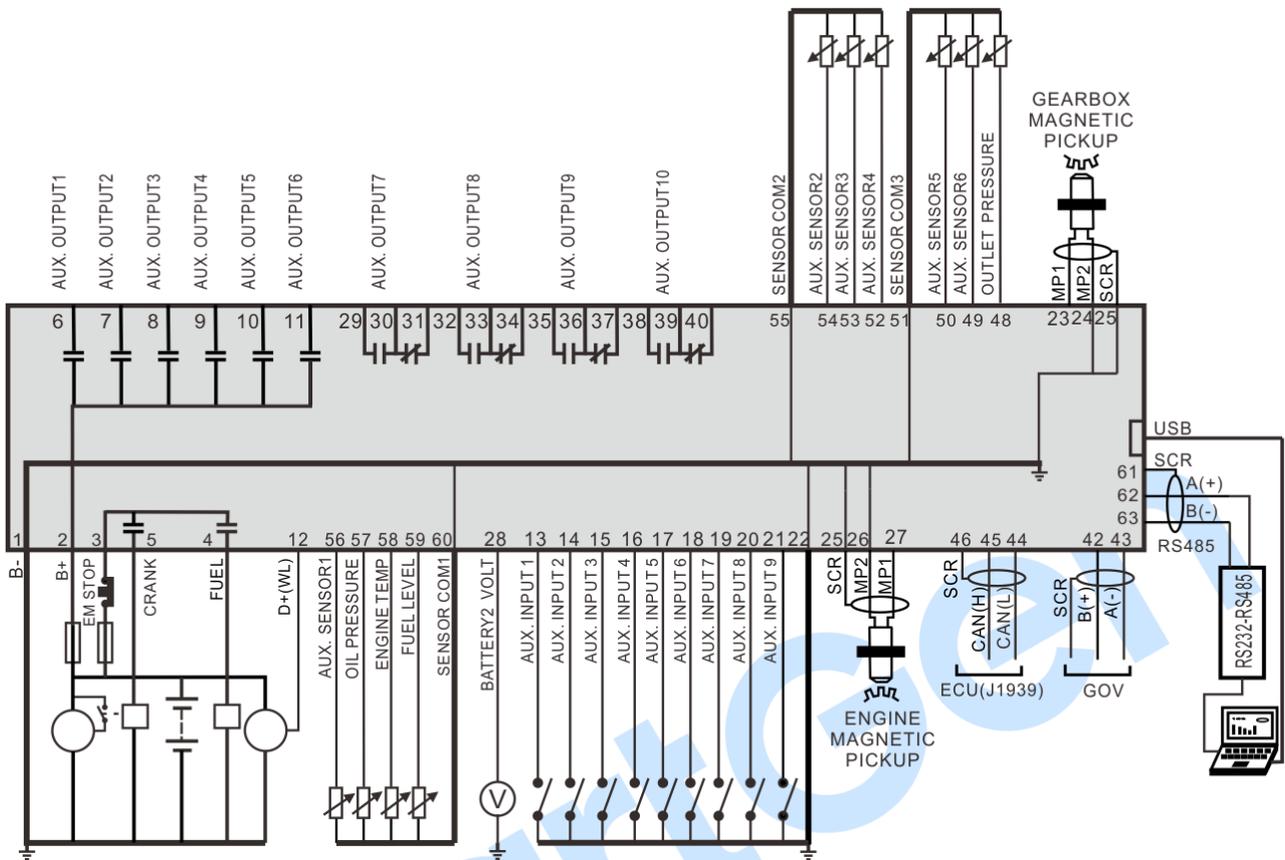

**Fig.4 APC715 Typical Application**

**11 INSTALLATION**

Controller is panel built-in design; it is fixed by clips when installed. The overall dimension and panel cutout is as following:

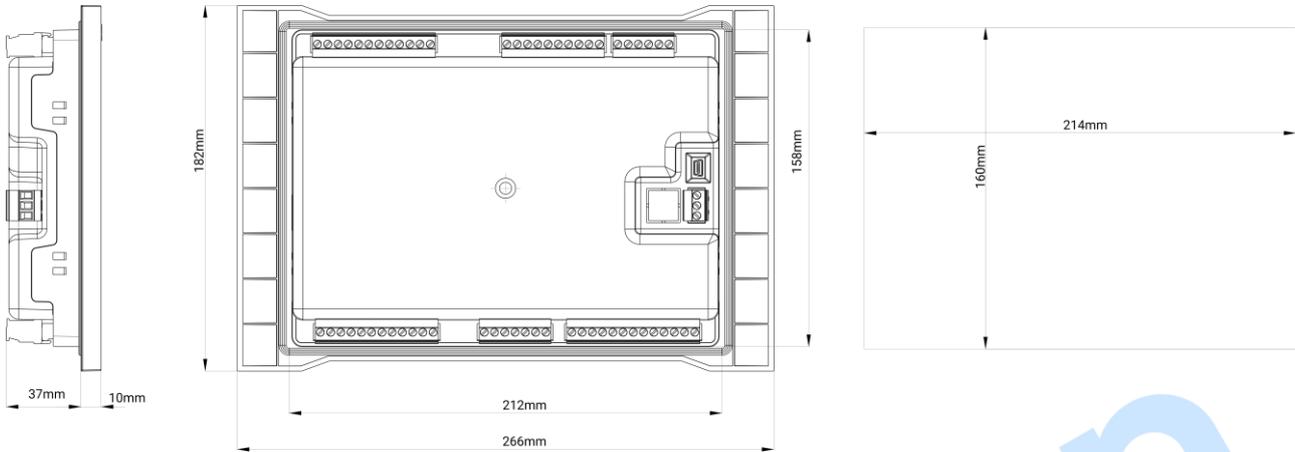

**Fig.5 Overall Dimension and Panel Cutout**

**1) Battery Voltage Input**

**▲NOTE:** APC715 controller can suit for widely range of battery voltage DC(8~35)V. Negative of battery must be connected with the engine shell soundly. The diameter of wire which from power supply to battery must be over 2.5mm<sup>2</sup>. If floating charger configured, please firstly connect output wires of charger to battery’s positive and negative directly, then, connect wires from battery’s positive and negative to controller’s corresponding input ports in order to prevent charger disturbing the controller’s normal working.

**2) Speed Sensor Input**

**▲NOTE:** Speed sensor is the magnetic equipment which be installed in starter and for detecting flywheel teeth. Its connection wires to controller should apply for 2 cores shielding line. The shielding layer should connect to shielding GND terminal in controller while another side is hanging in air. The else two signal wires are connected to MP1 and MP2 terminals, moreover, MP2 has already connected to B- internally. The output voltage of speed sensor should be within AC(1~24)V (effective value) during the full speed. AC12V is recommended (at rated speed). When install the speed sensor, let the sensor is spun to contacting flywheel first, then, port out 1/3 lap, and lock the nuts of sensor at last.

**3) Output and Expansion Relay**

**▲CAUTION:** All outputs of controller are relay contact output type. If need to expand the relays, please add freewheel diode to both ends of expand relay’s coils (when coils of relay have DC current) or, add resistance-capacitance return circuit (when coils of relay have AC current), in order to prevent disturbance to controller or others equipment.

## 12 CONNECTIONS OF CONTROLLER WITH J1939 ENGINE

### 12.1 CUMMINS ISB/ISBE

**Table 20 Connector B**

Terminals of controller	Connector B	Remark
Fuel relay output	39	
Starting relay output	-	Connect with starter coil directly.
Programmable output 1	Expand 30A relay, battery voltage of 01, 07, 12, 13 is supplied by relay.	ECU power; Set programmable output 1 as "ECU power".

**Table 21 9-pin Connector**

Terminals of controller	9 pins connector	Remark
CAN GND	SAE J1939 shield	CAN communication shielding line (connect with ECU terminal only).
CAN(H)	SAE J1939 signal	Impedance 120Ω connecting line is recommended.
CAN(L)	SAE J1939 return	Impedance 120Ω connecting line is recommended.

**Engine type: Cummins ISB.**

### 12.2 CUMMINS QSL9

Suitable for CM850 engine control module.

**Table 22 50-pin Connector**

Terminals of controller	50 pins connector	Remark
Fuel relay output	39	
Starting relay output	-	Connect to starter coil directly.

**Table 23 9-pin Connector**

Terminals of controller	9 pins connector	Remark
CAN GND	SAE J1939 shield-E	CAN communication shielding line (connect with ECU terminal only).
CAN(H)	SAE J1939 signal-C	Impedance 120Ω connecting line is recommended.
CAN(L)	SAE J1939 return-D	Impedance 120Ω connecting line is recommended.

**Engine type: Cummins-CM850.**

### 12.3 CUMMINS QSM11 (IMPORT)

It is suitable for CM570 engine control module. Engine type is QSM11 G1, QSM11 G2.

**Table 24 C1 Connector**

Terminals of controller	C1 connector	Remark
Fuel relay output	5&8	Outside expand relay, when fuel output, making port 5 and port 8 of C1 be connected.
Starting relay output	-	Connect to starter coil directly.

**Table 25 3-pin Data Link Connector**

Terminals of controller	3 pins data link connector	Remark
CAN GND	C	CAN communication shielding line (connect with ECU terminal only).
CAN(H)	A	Impedance 120Ω connecting line is recommended.
CAN(L)	B	Impedance 120Ω connecting line is recommended.

**Engine type: Cummins ISB.**

### 12.4 CUMMINS QSX15-CM570

It is suitable for CM570 engine control module. Engine type is QSX15 and so on.

**Table 26 50-pin Connector**

Terminals of controller	50 pins connector	Remark
Fuel relay output	38	Oil spout switch.
Starting relay output	-	Connect to starter coil directly.

**Table 27 9-pin Connector**

Terminals of controller	9 pins connector	Remark
CAN GND	SAE J1939 shield-E	CAN communication shielding line (connect with ECU terminal only).
CAN(H)	SAE J1939 signal-C	Impedance 120Ω connecting line is recommended.
CAN(L)	SAE J1939 return-D	Impedance 120Ω connecting line is recommended.

**Engine type: Cummins QSX15-CM570.**

## 12.5 CUMMINS GCS-MODBUS

It is suitable for GCS engine control module. Use RS485-MODBUS to read information of engine. Engine types are QSX15, QST30, QSK23/45/60/78 and so on.

**Table 28 D-SUB Connector 06**

Terminals of controller	D-SUB connector 06	Remark
Fuel relay output	5&8	Outside expand relay, when fuel output, making port 05 and 08 of the connector 06 be connected.
Starting relay output	-	Connect to starter coil directly.

**Table 29 D-SUB Connector 06**

Terminals of controller	D-SUB connector 06	Remark
RS485 GND	20	CAN communication shielding line (connect with ECU terminal only).
RS485+	21	Impedance 120Ω connecting line is recommended.
RS485-	18	Impedance 120Ω connecting line is recommended.

**Engine type: Cummins QSK-MODBUS, Cummins QST-MODBUS, Cummins QSX-MODBUS.**

## 12.6 CUMMINS QSM11

**Table 30 Engine OEM Connector**

Terminals of controller	OEM connector of engine	Remark
Fuel relay output	38	
Starting relay output	-	Connect with starter coil directly.
CAN GND	-	CAN communication shielding line (connect with controller's this terminal only).
CAN(H)	46	Impedance 120Ω connecting line is recommended.
CAN(L)	37	Impedance 120Ω connecting line is recommended.

**Engine type: Common J1939.**

**12.7 CUMMINS QSZ13**

**Table 31 Engine OEM Connector**

Terminals of controller	OEM connector of engine	Remark
Fuel relay output	45	
Starting relay output	-	Connect to starter coil directly.
Programmable output 1	16&41	Setting to idle speed control, normally open output. Making 16 connect to 41 during high-speed running of controller via external expansion relay.
Programmable output 2	19&41	Setting to pulse raise speed control, normally open output. Making 19 connect with 41 for 0.1s during high-speed warming of controller via external expansion relay.
CAN GND	-	CAN communication shielding line (connect with controller's this terminal only).
CAN(H)	1	Impedance 120Ω connecting line is recommended.
CAN(L)	21	Impedance 120Ω connecting line is recommended.

**Engine type: QSZ13, speed regulation can be implemented.**

**12.8 DETROIT DIESEL DDEC III / IV**

**Table 32 Engine CAN Port**

Terminals of controller	CAN port of engine	Remark
Fuel relay output	Expand 30A relay, battery voltage of ECU is supplied by relay.	
Starting relay output	-	Connect to starter coil directly.
CAN GND	-	CAN communication shielding line (connect with controller's terminal only).
CAN(H)	CAN(H)	Impedance 120Ω connecting line is recommended.
CAN(L)	CAN(L)	Impedance 120Ω connecting line is recommended.

**Engine type: Common J1939.**

## 12.9 DEUTZ EMR2

**Table 33 F Connector**

Terminals of controller	F connector	Remark
Fuel relay output	Expand 30A relay, battery voltage of 14 is supplied by relay. Fuse is 16A.	
Starting relay output	-	Connect to starter coil directly.
-	1	Connect to battery negative pole.
CAN GND	-	CAN communication shielding line (connect with controller's terminal only).
CAN(H)	12	Impedance 120Ω connecting line is recommended.
CAN(L)	13	Impedance 120Ω connecting line is recommended.

**Engine type: VolvoEDC4.**

## 12.10 JOHN DEERE

**Table 34 21-Pin Connector**

Terminals of controller	21 pins connector	Remark
Fuel relay output	G, J	
Starting relay output	D	
CAN GND	-	CAN communication shielding line (connect with controller's terminal only).
CAN(H)	V	Impedance 120Ω connecting line is recommended.
CAN(L)	U	Impedance 120Ω connecting line is recommended.

**Engine type: John Deere.**

## 12.11 MTU MDEC

Suitable for MTU engines, 2000 series, 4000 series.

**Table 35 X1 Connector**

Terminals of controller	X1 connector	Remark
Fuel relay output	BE1	
Starting relay output	BE9	
CAN GND	E	CAN communication shielding line (connect with one terminal only)
CAN(H)	G	Impedance 120Ω connecting line is recommended.
CAN(L)	F	Impedance 120Ω connecting line is recommended.

**Engine type: MTU-MDEC-303.**

**12.12 MTU ADEC (SMART MODULE)**

It is suitable for MTU engine with ADEC (ECU8) and SMART module.

**Table 36 ADEC (X1 Port)**

Terminals of controller	ADEC (X1 port)	Remark
Fuel relay output	X1 10	X1 Terminal 9 Connected to negative of battery.
Starting relay output	X1 34	X1 Terminal 33 Connected to negative of battery.

**Table 37 SMART (X4 Port)**

Terminals of controller	SMART (X4 port)	Remark
CAN GND	X4 3	CAN communication shielding line (connect to controller's this terminal only).
CAN(H)	X4 1	Impedance 120Ω connecting line is recommended.
CAN(L)	X4 2	Impedance 120Ω connecting line is recommended.

**Engine type: MTU-ADEC.**

**12.13 MTU ADEC (SAM MODULE)**

It is suitable for MTU engine with ADEC (ECU7) and SAM module.

**Table 38 ADEC (X1 Port)**

Terminals of controller	ADEC (X1 port)	Remark
Fuel relay output	X1 43	X1 Terminal 28 Connected to negative of battery.
Starting relay output	X1 37	X1 Terminal 22 Connected to negative of battery.

**Table 39 SAM (X23 Port)**

Terminals of controller	SAM (X23 port)	Remark
CAN GND	X23 3	CAN communication shielding line (connect with controller's this terminal only).
CAN(H)	X23 2	Impedance 120Ω connecting line is recommended.
CAN(L)	X23 1	Impedance 120Ω connecting line is recommended.

**Engine type: Common J1939.**

## 12.14 PERKINS

It is suitable for ADEM3/ ADEM4 engine control module. Engine type is 2306, 2506, 1106, and 2806.

**Table 40 Connector**

Terminals of controller	Connector	Remark
Fuel relay output	1, 10, 15, 33, 34	
Starting relay output	-	Connect to starter coil directly.
CAN GND	-	CAN communication shielding line (connect with controller's terminal only).
CAN(H)	31	Impedance 120Ω connecting line is recommended.
CAN(L)	32	Impedance 120Ω connecting line is recommended.

**Engine type: Perkins.**

## 12.15 SCANIA

It is suitable for S6 engine control module. Engine type is DC9, DC12, and DC16.

**Table 41 B1 Connector**

Terminals of controller	B1 connector	Remark
Fuel relay output	3	
Starting relay output	-	Connect to starter coil directly.
CAN GND	-	CAN communication shielding line (connect with controller's terminal only).
CAN(H)	9	Impedance 120Ω connecting line is recommended.
CAN(L)	10	Impedance 120Ω connecting line is recommended.

**Engine type: Scania.**

## 12.16 VOLVO EDC3

Suitable engine control mode is TAD1240, TAD1241, and TAD1242.

**Table 42 "Stand alone" Connector**

Terminals of controller	"Stand alone" connector	Remark
Fuel relay output	H	
Starting relay output	E	
Programmable output 1	P	ECU power supply; Set programmable output 1 as "ECU power".

**Table 43 “Data bus” Connector**

Terminals of controller	“Data bus” connector	Remark
CAN GND	-	CAN communication shielding line (connect with controller’s terminal only).
CAN(H)	1	Impedance 120Ω connecting line is recommended.
CAN(L)	2	Impedance 120Ω connecting line is recommended.

**Engine type: Volvo.**

**NOTE:** When this engine type is selected, preheating time should be set to at least 3 seconds.

**12.17 VOLVO EDC4**

Suitable engine types are TD520, TAD520 (optional), TD720, TAD720 (optional), TAD721, TAD722, and TAD732.

**Table 44 Connector**

Terminals of controller	Connector	Remark
Fuel relay output	Expanded 30A relay, and relay offers battery voltage for terminal14. Fuse is 16A	
Starting relay output	-	Connect to starter coil directly.
	1	Connected to negative of battery.
CAN GND	-	CAN communication shielding line (connect with controller’s terminal only).
CAN(H)	12	Impedance 120Ω connecting line is recommended.
CAN(L)	13	Impedance 120Ω connecting line is recommended.

**Engine type: VolvoEDC4.**

## 12.18 VOLVO-EMS2

Volvo Engine types are TAD734, TAD940, TAD941, TAD1640, TAD1641, and TAD1642.

**Table 45 Engine CAN Port**

Terminals of controller	Engine's CAN port	Remark
Programmable output 1	6	ECU stop; Set programmable output 1 as "ECU stop".
Programmable output 2	5	ECU power; Set programmable output 2 as "ECU power".
	3	Negative power.
	4	Positive power.
CAN GND	-	CAN communication shielding line (connect with controller's terminal only).
CAN(H)	1(Hi)	Impedance 120Ω connecting line is recommended.
CAN(L)	2(Lo)	Impedance 120Ω connecting line is recommended.

**Engine type: Volvo-EMS2, speed regulation can be implemented.**

**NOTE:** When this engine type is selected, preheating time should be set to at least 3 seconds.

## 12.19 YUCHAI

It is suitable for Yuchai BOSCH common rail electronic-controlled engine.

**Table 46 Engine 42-pin Port**

Terminals of controller	Engine 42 pins port	Remark
Fuel relay output	1.40	Connect to engine ignition lock
Starting relay output	-	Connect to starter coil directly
CAN GND	-	CAN communication shielding line (connect with controller's this terminal only)
CAN(H)	1.35	Impedance 120Ω connecting line is recommended.
CAN(L)	1.34	Impedance 120Ω connecting line is recommended.

**Table 47 Engine 2-pin Port**

Battery	Engine 2 pins port	Remark
Battery negative	1	Wire diameter: 2.5mm <sup>2</sup> .
Battery positive	2	Wire diameter: 2.5mm <sup>2</sup> .

**Engine type: BOSCH, speed regulation can be implemented.**

**12.20 WEICHAI**

It is suitable for Weichai BOSCH common rail electronic-controlled engine.

**Table 48 Engine Port**

Terminals of controller	Engine port	Remark
Fuel relay output	1.40	Connect to engine ignition lock.
Starting relay output	1.61	
CAN GND	-	CAN communication shielding line (connect to the controller at this end only).
CAN(H)	1.35	Impedance 120Ω connecting line is recommended.
CAN(L)	1.34	Impedance 120Ω connecting line is recommended.

**Engine type: GTSC1**, speed regulation can be implemented.

**NOTE:** If there is any question about connection between controller and ECU communication, please feel free to contact Smartgen’s service.

**13 USB**

Users can set the controller’s parameters and monitor the controller’s status via USB port using the test software which provided by SmartGen company. USB port is active in stop mode only while at other times it couldn’t be detected by PC.

**14 FAULT FINDING**

**Table 49 Fault Finding**

Symptoms	Possible Solutions
Controller no response with power	Check starting batteries; Check controller connection wirings; Check DC fuse.
Genset shutdown	Check the water/cylinder temperature is too high or not; Check DC fuse.
Controller emergency stop	Check emergence stop button is correct or not; Check whether the positive of starting battery is connected with the emergency stop input; Check whether the circuit is open.
Low oil pressure alarm after crank disconnect	Check the oil pressure sensor and its connections.
High water temp. alarm after crank disconnect	Check the temperature sensor and its connections.
Shutdown alarm in running	Check related switch and its connections according to the information on LCD; Check programmable inputs.
Crank not disconnect	Check fuel oil circuit and its connections; Check starting batteries; Check speed sensor and its connections; Refer to engine manual.
Starter no response	Check starter connections; Check starting batteries.
RS485 comm. failure	Check connections; Check setting of COM port is correct or not; Check RS485's connections of A and B is reverse connect or not; Check RS485 transfer module whether damage or not; Check communication port of PC whether damage.
ECU comm. failure	Check connections of CAN high and low polarity; Check if correctly connected of 120Ω resister; Check if engine type is correct; Check if connections from controller to engine and outputs setting are correct.
ECU warning or shutdown	Get information from LCD of alarm page; If there is detailed alarm, check engine according to description. If not, please refer to engine manual according to SPN alarm code.